

## Integration Note

Manufacturer:	Intelbras
Model Number(s):	<b>AMT 2000 / 4000</b>
g! Core Module Version:	8.7.602
Driver Developer:	Zoom Digital Home
Document Revision Date:	26 January 2023

### Overview

This is a two-way driver to integrate Intelbras AMT Security Systems. Its support AMT 2000 and 4000 series with ethernet connection or ethernet Intelbras adapter.

### Supported Features

- **Arm/Disarm:** Control and feedback panel status.
- **Zone Status:** Status and Event Maps for open/close zones sensors.
- **Zone Bypass:** Individual zone bypass and feedback status.
- **Partition:** Individual partition settings and control.
- **Alarm and Failures Alerts:** Alerts for failure events and alarms on security panel and partitions .

Any feature not specifically noted as supported should be assumed to be unsupported.
--

### Driver License

This driver works for a trial period. After that it's requires a license key to function.

Pricing and license keys can be obtained contacting us by [drivers@zoomdigitalhome.com.br](mailto:drivers@zoomdigitalhome.com.br).

License keys are issued on a per controller basis. You only need a single license key for multiple instances on the same controller.

### Dealer Support

Any help or support questions, please, contact us by [drivers@zoomdigitalhome.com.br](mailto:drivers@zoomdigitalhome.com.br).

## Device Setup


Set up your device as recommended by manufacturer's instructions.

Pay attention to IP address and communication port.


Set a static IP or reserve it on DHCP server.

## Installation Process

1. Please check the latest driver version on [www.zoomdigitalhome.com.br/drivers](http://www.zoomdigitalhome.com.br/drivers)
2. Under the Security tab in configurator, add a new Security System.

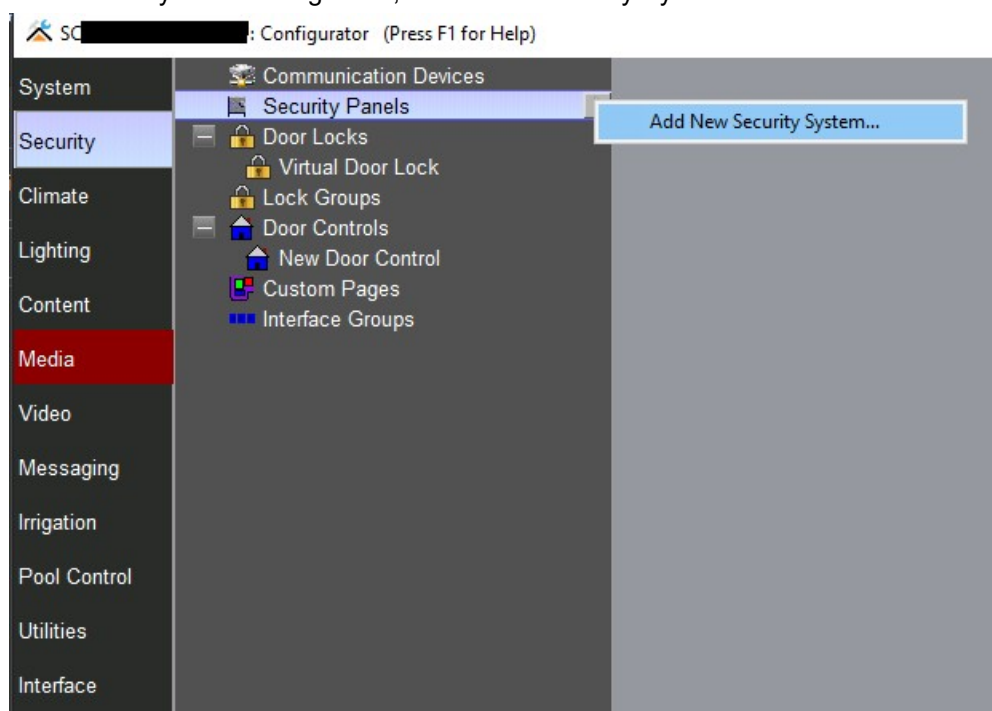

3. Use the Search Folder button to point Configurator to the location of you saved the driver.

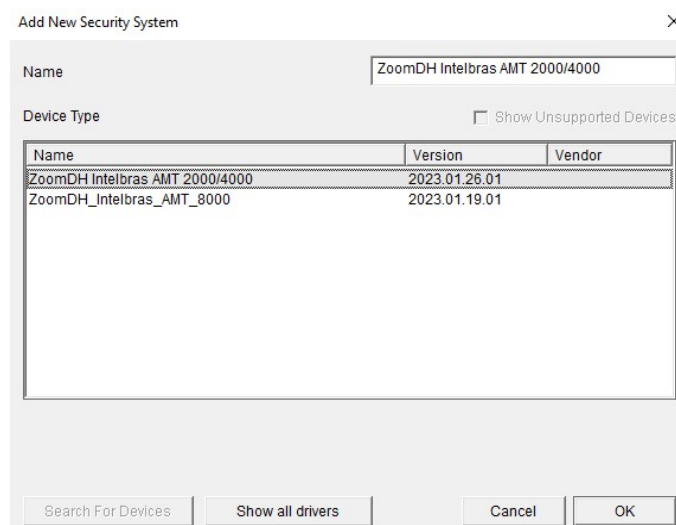

4. Select the driver and click OK.

5. Set IP Address and Port of the security panel.
6. Set Status Update Time(s) (default 5 seconds).
7. On Security System Settings page set:
  - a. Master Password: Panel master password or created password to Elan user
  - b. Partition x Zones: Set the zones configured in each partition on panel
  - c. PGMS: Set the number of PGMS outputs used

**Security System Settings**

Intelbras Settings

Informe a senha do usuário criado para ELAN, ou a senha MASTER da central

Senha Master

Modelo

Firmware

Informe as zonas configuradas em cada particao da central no formato: 1-8 ou

Particao 1 Zonas

Particao 2 Zonas

Particao 3 Zonas

Particao 4 Zonas

Informe o numero de PGMS configuradas na central. Default: 2

PGMS

8. Add Partitions to the system.
9. Add Zones and set to the witch partition is it.

## Common Mistakes

1. Incorrect IP address or TCP port settings.
2. The device only supports one socket connection. Please disconnect any other software connected to this IP and port and try a power cycling the device.

## ELAN Developer Partner Information

This ELAN driver was written and supported by:



[www.zoomdigitalhome.com.br](http://www.zoomdigitalhome.com.br)  
[drivers@zoomdigitalhome.com.br](mailto:drivers@zoomdigitalhome.com.br)